SU-6 switch setting (firmware V2.21)

Switch	Describe (ON)	Screen printing	PS AUDIO	HOLO AUDIO	GUSTARD	L. K. S	W4S
SW1	DSD_ON OUTPUT FOR PIN13	HP13	0FF	OFF	OFF	0FF	OFF
SW2	DSD_ON OUTPUT FOR PIN14	HP14	0FF	0FF	0FF	ON	0FF
SW3	DSD_ON OUTPUT FOR PIN15	HP15	OFF	OFF	ON	0FF	0FF
SW4	DSD ON OUTPUT FOR PIN16	HP16	0FF	OFF	0FF	0FF	0FF
SW5	CLK output mode, OFF is MCLK, ON is WCK(WCLK/LRCLK)	MC/WCK	OFF	OFF	OFF	OFF	OFF
SW6	MCLK OUT CLOCK 22.5792 24.576MHz/45.1584 49.152Mhz, OFF is 22/24M, ON is 45/49M	X2	OFF	OFF	0FF	0FF	OFF
SW7	DSD LR CHANNEL opposition	DSDCH	0FF	ON	ON	0FF	OFF
SW8	BCLK SIGNAL opposition	ВСН	OFF	OFF	OFF	0FF	OFF
SW9	LRCLK SIGNAL opposition	LRCH	ON	ON	OFF	0FF	ON
SW10	DATA SIGNAL opposition	DACH	ON	ON	OFF	0FF	OFF